PART 7 - MAINTENANCE AND PRACTICAL ADVICE

<u>CAUTION!</u> Before performing any maintenance unplug the machine from the power supply.


7.1- GENERAL INFORMATION

• Check the cables periodically for wear and contact the "ASSISTANCE SERVICE" if it should need to be replaced.

SERVICE CENTER AUTHORIZED DEALER

ROLLER TOAST

INSTRUCTIONS FOR USE AND MAINTENANCE

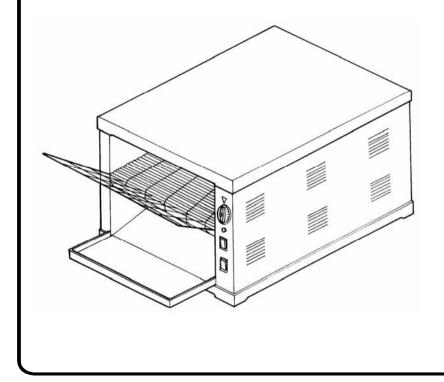

mod. Roller Small / VV - Roller Toast / VV
Roller Double / VV

INTRODUCTION

- This manual has been drawn up in order to supply the client with full information on the machine and on the regulations that apply to it, as well as to provide instructions for its use and maintenance for best results and long life.
- This manual should be given to the personnel assigned to use the machine and perform its maintenance

INDEX

PART 1 - INFORMATION ABOUT THE MACHINE page 04 1.1 - GENERAL PRECAUTIONS 1.2 - SAFETY DEVICES INSTALLED ON THE MACHINE 1.3 - DESCRIPTION OF THE MACHINE 1.3.1 - general description 1.3.2 - construction features 1.3.3 - composition of the machine PART 2 - TECHNICAL DATA

page 06 2.1 - DIMENSIONS, WEIGHT, CHARACTERISTICS ...

PART 3 - RECEPTION OF THE MACHINE page 07

3.1 - SHIPMENT

3.2 - INSPECTION OF PACKING ON ARRIVAL

3.3 - DISPOSAL OF PACKING MATERIALS

PART 4 - INSTALLATION page 08

4.1 - PLACEMENT OF THE MACHINE

4.2 - ELECTRICAL CONNECTION

4.3 - WIRING DIAGRAM

PART 5 - USE OF THE MACHINE page 10

5.1 - CONTROLS

5.2 - FIRST USE OF MACHINE

5.3 - POSITIONING REAR DOOR

PART 6 - CLEANING THE MACHINE page 11

6.1 - GENERAL INFORMATION

6.2 - FEET

6.3 - POWER CABLE

5.3- POSITION OF THE REAR DOOR

The machine can be used with the rear door in two positions:

- A Closed the product falls directly onto the collection chute (for toasted bread):
- B Open the product is discharged on to the rear door (for toasted sandwiches, pizza, etc.

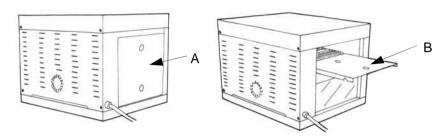


Fig.n°7 - Position of rear door

PART 6 - CLEANING THE MACHINE

CAUTION! Before cleaning the machine unplug it from the power supply.

6.1- GENERAL INFORMATION

- The machine should be washed using normal detergents at room temperature, and a wet cloth.
- The machine should be cleaned scrupulously on all parts in contact with food products. The shelves can be removed as shown below.
- Do not use spray cleaners or jets of water at high pressure.
- Do not use scrapers, brushes or anything else that could damage the surface of the machine.

6.2 - FEET

With time the feet could deteriorate and lose their elasticity, thus affecting the stability of the machine. They should therefore be replaced.

6.3 - POWER CABLE

Check the state of wear of the cable from time and, if necessary, call the "Assistance Service" to have it replaced.

PART 5 - USE OF THE MACHINE

5.1- CONTROLS

The controls are arranged as shown in the Figure below:

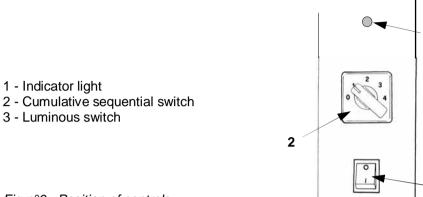


Fig.n°6 - Position of controls

5.2 - FIRST USE OF MACHINE

The machine is delivered with a scratch-resistant plastic film covering the outer surfaces, that should be carefully removed before using the machine, along with any residues of adhesive.

To do this, do not use any sharp instruments, abrasive or inflammable substances.

After removing the film, the machine should be made to operate in an open environment at maximum power for 15-20 minutes.

This should be done to heat the insulating materials used in the construction of the machine and any traces of grease left after mechanical processing of the separate parts that could produce some smoke the first time the machine is used.

PART 7 - MAINTENANCE AND PRACTICAL ADVICE page 12

7.1 - GENERAL INFORMATION

INDEX OF FIGURES

Fig.1	- General view of the machine	page 05
Fig.2	- Dimensions and measurements of machine	page 06
Fig.3	- Description of packing materials	page 07
Fig.4	- Technical rating plate with serial number	page 08
Fig.5	- Wiring diagram	page 09
Fig.6	- Position of controls	page 10
Fia.7	- Position of rear door	page 11

PART 1 - INFORMATION ABOUT THE MACHINE

1.1- GENERAL PRECAUTIONS

- The machine should only be used by trained personnel who should be fully familiar with the safety regulations set forth in this manual.
- In case of turnover in personnel, the new user should be trained before using the machine.
- Although the machine is equipped with safety mechanisms, do not touch the heating elements.
- Before cleaning or performing maintenance, unplug the machine from the power supply.
- When performing maintenance or cleaning the machine (after removing the guards), pay particular attention to the residual hazards.
- When performing maintenance or cleaning the machine, concentrate on what you are doing.
- Periodically check the conditions of the power supply cable; a worn or damaged cable is a serious electrical hazard.
- If the machine gives the impression or clear evidence of malfunctioning, do not use it and call the "Service Center".
- Do not use the machine for anything other than food products.
- Do not attempt any repairs yourself always contact authorized repair shops.

1.2 - SAFETY DEVICES INSTALLED ON THE MACHINE

The safety devices against hazards of an electrical and mechanical nature have been installed in conformity with EN 60335 - 1 and CEE 89/392; 91/368 regulations.

The machine is therefore equipped with safety devices for electrical and mechanical protection both when operating and during cleaning and maintenance.

There are, however, some "RESIDUAL RISKS" that cannot be completely eliminated, indicated in this manual under the heading "CAUTION", that have to do with the danger of burns during operations of loading and unloading the products and while cleaning the machine.

1.3- DESCRIPTION OF THE MACHINE

1.3.1 - general description

The machine has been designed and produced by our company for the precise purpose of ensuring:

• maximum hygiene, achieved by carefully selecting the materials that come into contact with the food product to be heated;

4.3- WIRING DIAGRAM

Single-phase 230V 50Hz power supply

Legend:

• R = 8 resistors

• I.L. = luminous switch

• I.S.C. = cumulative sequential switch

V = fan

• M = chain drive motor

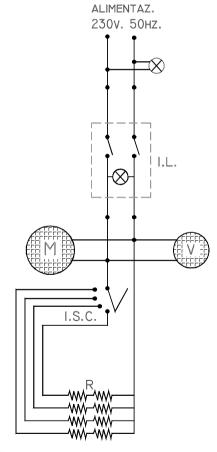


Fig.n°5 - Wiring diagram

effect, dispose of the packing materials as prescribed by those regulations.

PART 4 - INSTALLATION

4.1- PLACEMENT OF THE MACHINE

The surface on which the machine stands should have a sufficient area to contain the dimensions of the machine indicated in the Table on page 07-08, and should be level, dry, smooth, sturdy, stable and at a height of 80 cm from the ground.

The machine should be installed in a well ventilated location. It can be located close to walls if they have a good resistance to heat. If not, leave a space of at least 5 cm between the machine and any walls, to prevent fire hazards.

4.2- ELECTRICAL CONNECTION

The machine is equipped with a power cable with a section of $3x1.5 \text{ mm}^2$, a length of 1.5 mt and a CEI plug.

Connect the machine to a 230 Volt 50 Hz power supply installing a differential - overheat cutoff circuit breaker calibrated at 15A, $\Delta I = 0.03A$. Ascertain that the grounding system is in perfect working order.

Check also that the data on the rating - serial number plate (see Fig. 4) corresponds with the data on the delivery bill and that the switch and socket are readily accessible when the machine is in use.

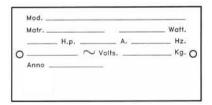


Fig.n°4 - Technical rating plate with serial number

- minimum dispersion of the heat produced by the resistors;
- · sturdiness and stability of all components;
- excellent manageability.

1.3.2 - Construction features


The machine is entirely constructed in AISI 304 stainless steel with a toasting surface in AISI 316. It ensures hygiene and excellent resistance to oxidation, as well as being impervious to acids and salts.

The baking chamber is covered with insulating material in order to prevent useless dispersion of heat, deterioration of the electrical parts installed and overheating the external surfaces.

The heating elements consist of quartz pipes.

1.3.3 - composition of the machine


Fig.n°1 - General view of the machine

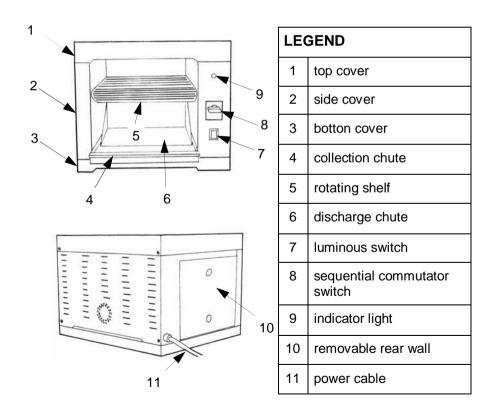

PART 2 - TECHNICAL DATA

2.1 - DIMENSIONS, WEIGHT, CHARACTERISTICS ...

Fig.n°2 - Dimensions and measurements of machine

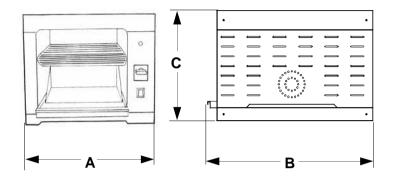

	Power	Power source	Output	Dim. of gridiron LxP	Dimensions AxBxC	Net weight
	W			mm	mm	Kg
Roller Toast	2660	230V/50Hz	n. 200	220x330	370x480+150 h.340	15
Roller Toast VV	2660	230V/50Hz	n. 80÷360	220x330	370x480+150 h.340	15,5
Roller Toast	3000	230V/50Hz	n. 410	305x410	430x530+340 h.360	25
Roller Toast VV	3000	230V/50Hz	n. 150÷480	305x410	430x530+340 h.360	25,5
Roller Double VV	3000	230V/50Hz	n. 75÷230	305x2 410x2	450x535+350 +385 h.560	27

ATTENTION!


THE ELECTRICAL POWER RATING OF THE MACHINE IS SHOWN ON THE RATING PLATE ATTACHED TO THE BACK. BEFORE CONNECTING TO THE POWER SUPPLY READ PARAGRAPH 4.2 "ELECTRICAL CONNECTION"

PART 3 - RECEPTION OF THE MACHINE

3.1 - SHIPMENT (see Figure below)

The machines leave our warehouse after being carefully packed. The package consists of:

- a sturdy cardboard carton + filling material inside;
- the machine;
- the instruction manual for use and maintenance.

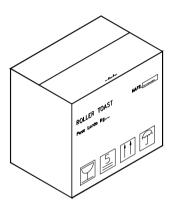

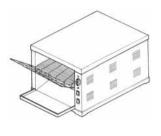




Fig.n°3 - Description of packing materials

3.2- INSPECTION OF PACKING ON ARRIVAL

Upon receipt of the package containing the machine, inspect the packing thoroughly to ascertain that it has not undergone any serious damage in transit.

If an inspection of the outside of the packing reveals signs of mishandling, dropping or impact, the transporter should be informed of the damage and, within three days of receipt as indicated on the shipping documents, a full report of any damage to the machine should be filed.

3.3- DISPOSAL OF PACKING MATERIALS

The packing materials used (carton, possibly pallets, plastic wrapping and polyurethane foam) are classified as solid urban wastes and can therefore be disposed of without any difficulty.

If the machine is installed in countries where particular regulations are in